


FiloSlim injection valve

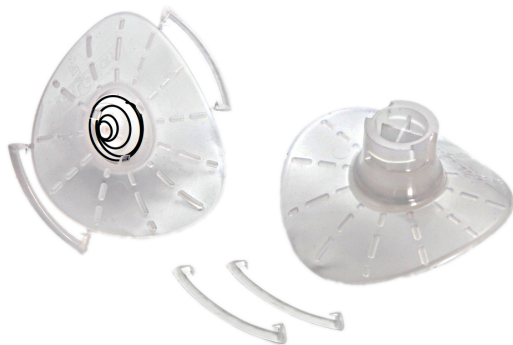

The injection valve is wrapped under the wrap around tape and has a one way valve to prevent injected resin from flowing back.

The injection valve's design enables you to fill the cable joint with either the injection pump or by hand directly from the resin packaging.

Place the resin packaging on the valve and open it with a quarter turn. This manoeuvre anchors the packaging to the valve and creates a leak proof connection.

Once the cable joint is filled, remove the packaging with a reverse quarter turn. These simple actions ensure a clean and tidy joint without spillage.

Any remaining resin in the package that has not been exposed to air, can still be used in another cable joint.

Features

- Hybrid filling system
- 100% leak-proof and clean process
- Injection valve and resin packaging reseal when removed from a connection
- Contoured to enable proper positioning on a cable joint
- The underside is equipped with small bumps to grip the mesh
- Oval shaped for simple and leak proof taping of the joint
- Handy hooks temporarily secure the mesh

Products

Art.nr.	Product Name	Order unit
80560-UK	FiloSlim injection valve	10 pcs/bag